


RESON 7150

You can use the processor as data collection computer or configured them separately

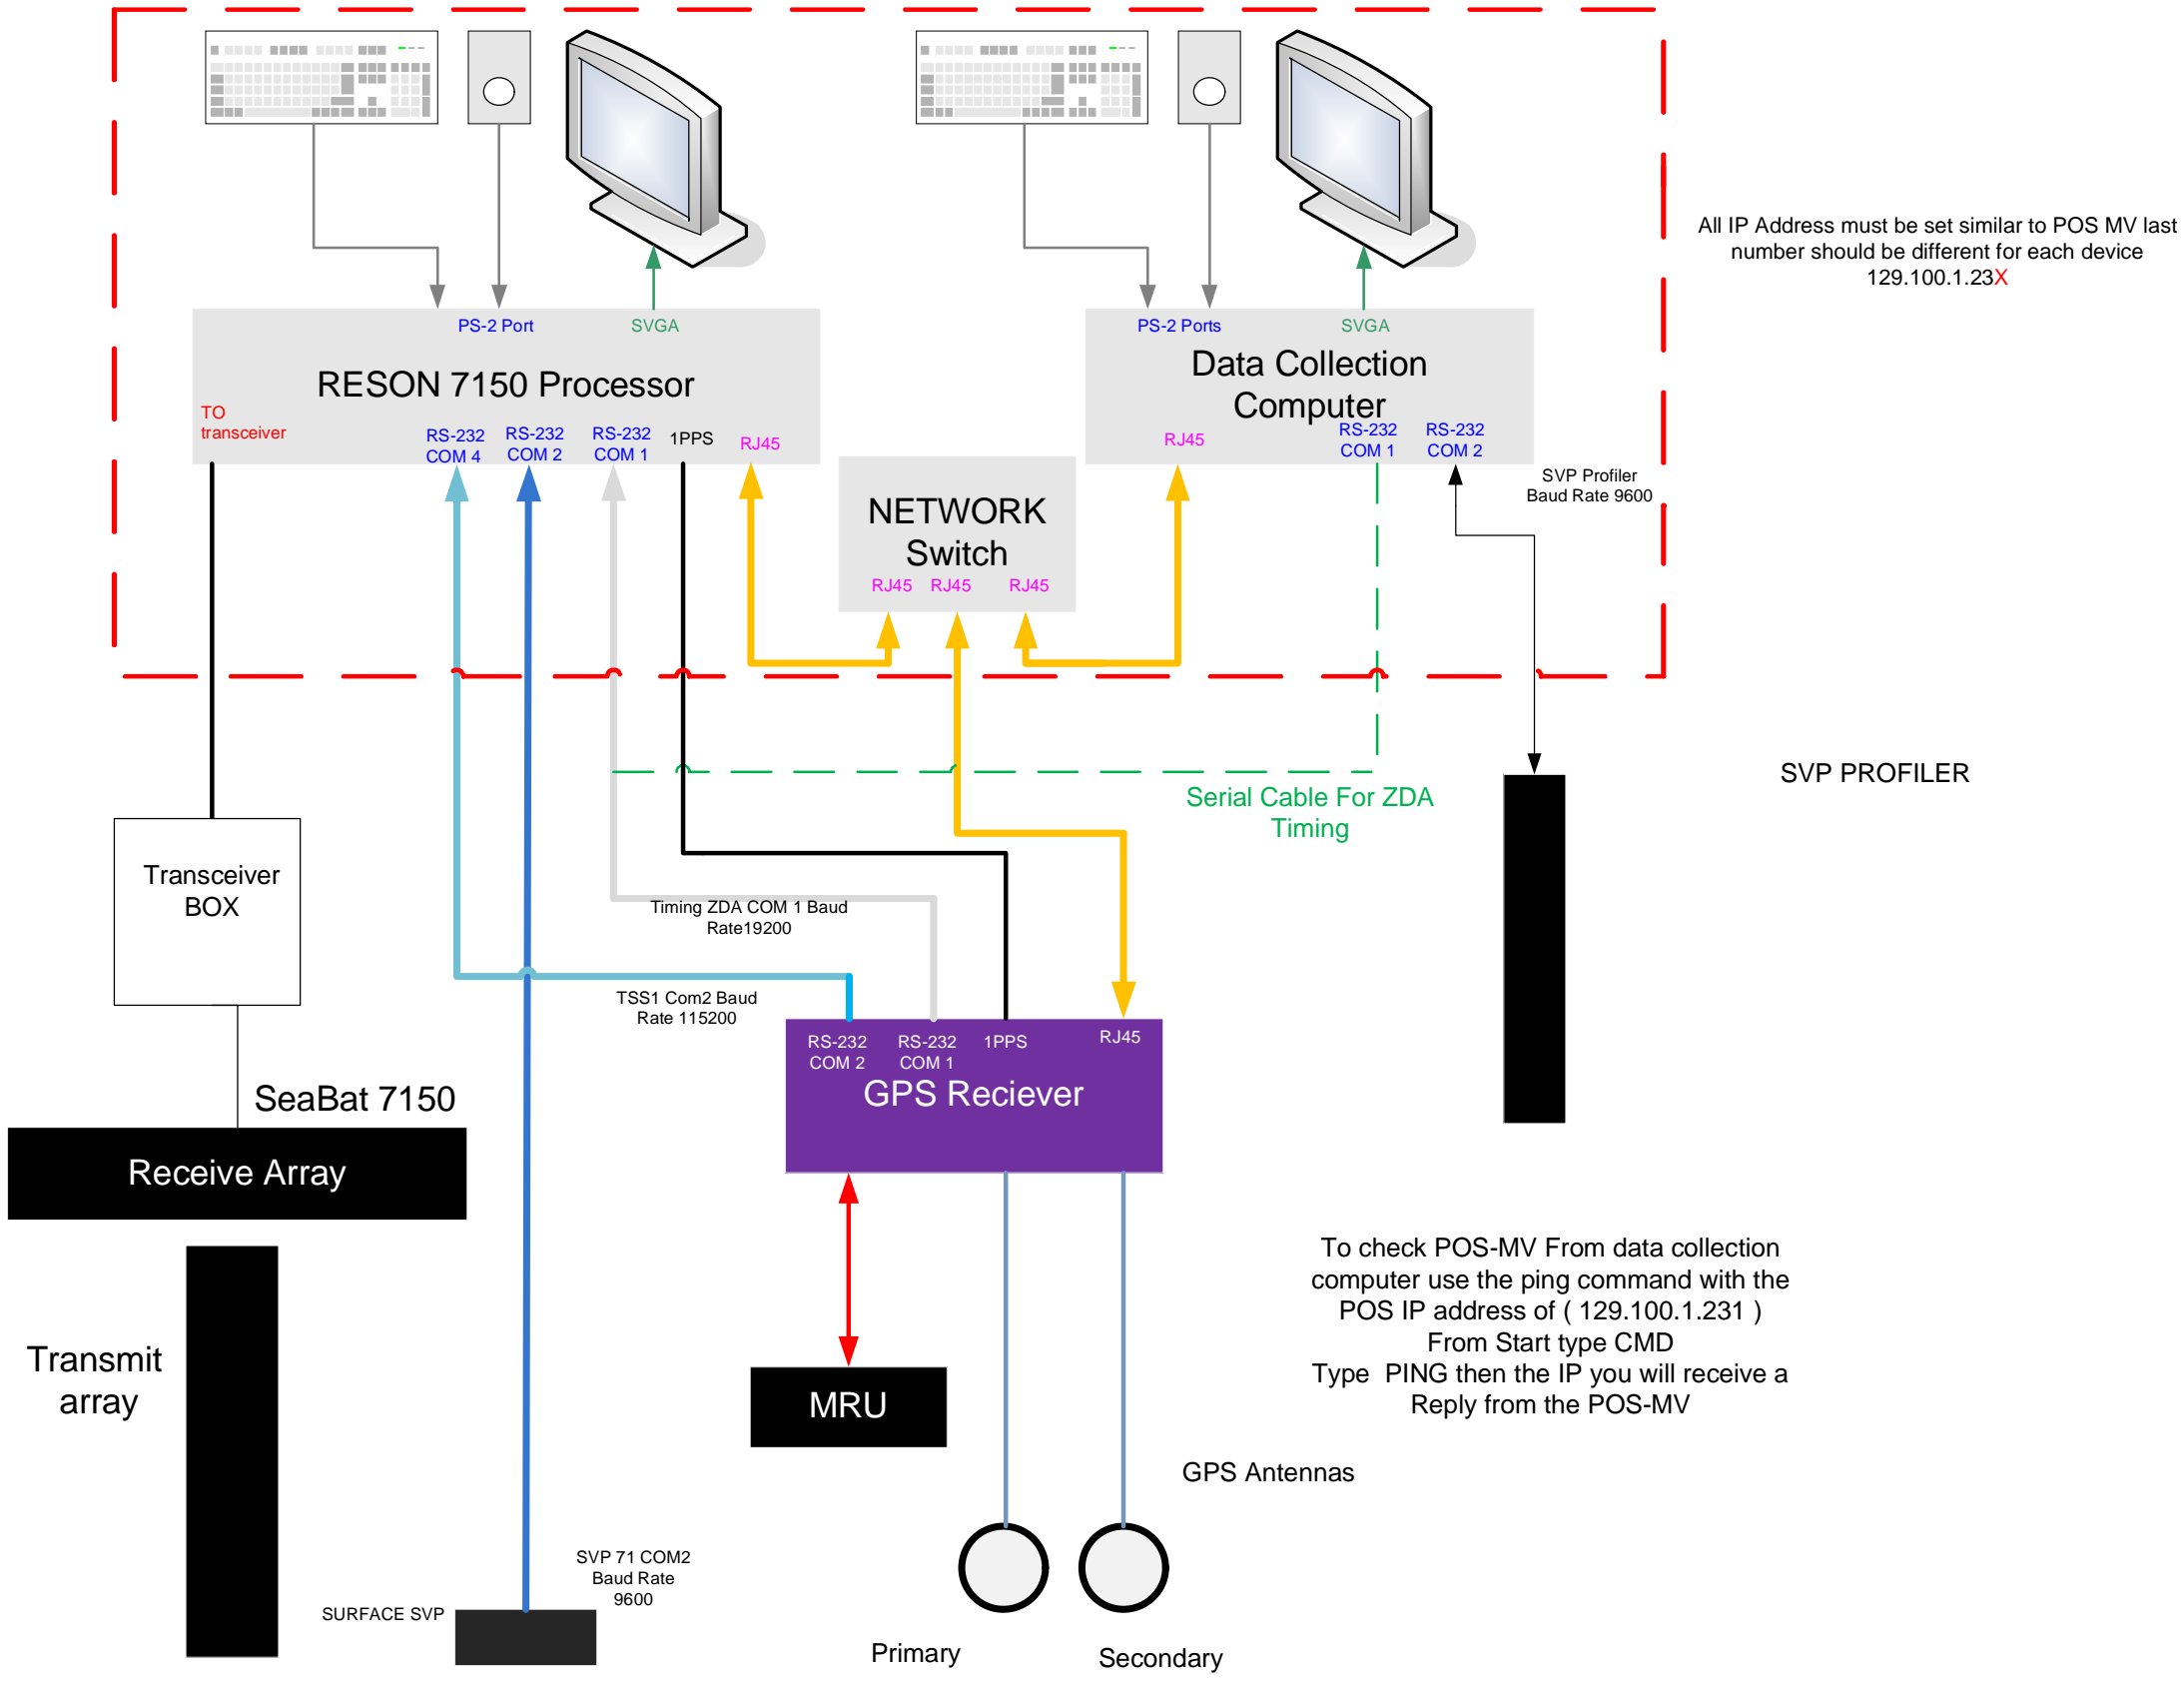

All IP Address must be set similar to POS MV last number should be different for each device
129.100.1.23X

SVP PROFILER

To check POS-MV From data collection computer use the ping command with the POS IP address of (129.100.1.231)
From Start type CMD
Type PING then the IP you will receive a Reply from the POS-MV

All Serial Connection to computer need Null Modem Cable
2,3,5 going to 3,2,5

Check Carefully to insure the coordinate system used by the software is correct

